


### REMOVAL SERVICE POINTS


#### ◀A▶ CYLINDER HEAD BOLT REMOVAL

Using the special tool MB991653 to loosen the cylinder head bolts.

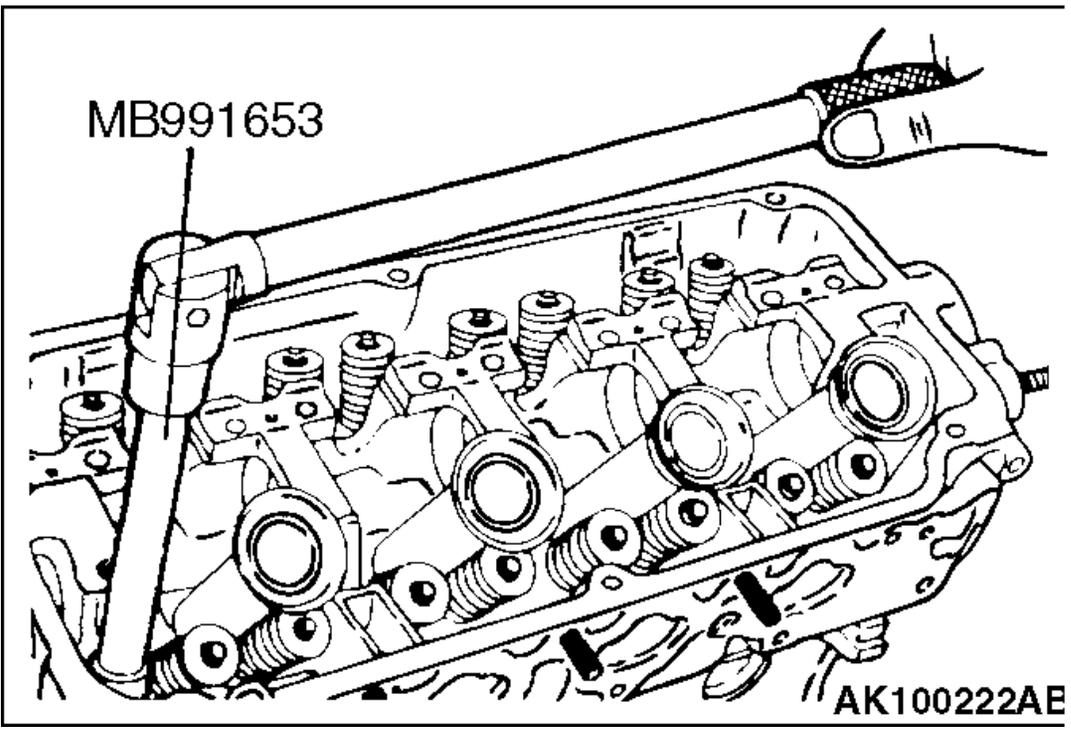


#### ◀B▶ RETAINER LOCK REMOVAL

MD998735

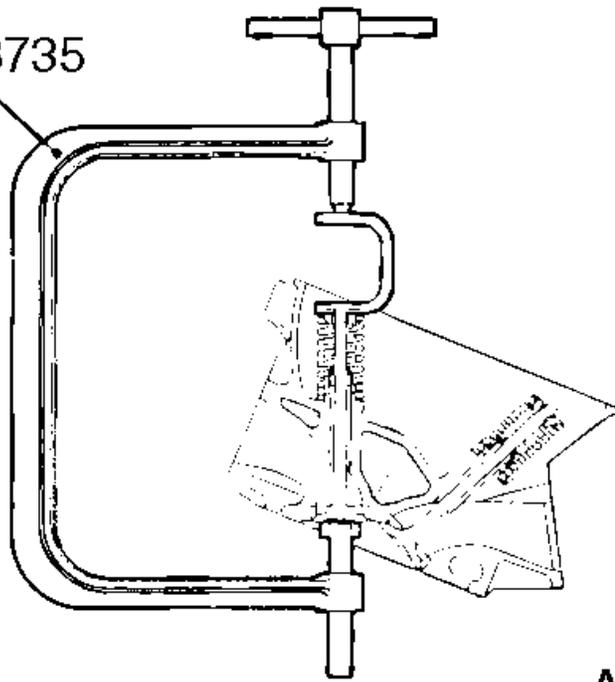


AK100166AE

1. Using special tool MD998735 or MD998772, compress the retainer locks.
  2. Remove the retainer locks.
- NOTE: Tag removed valves, springs and other components, noting their cylinder numbers and locations to facilitate reassembly. Store these components safely.*

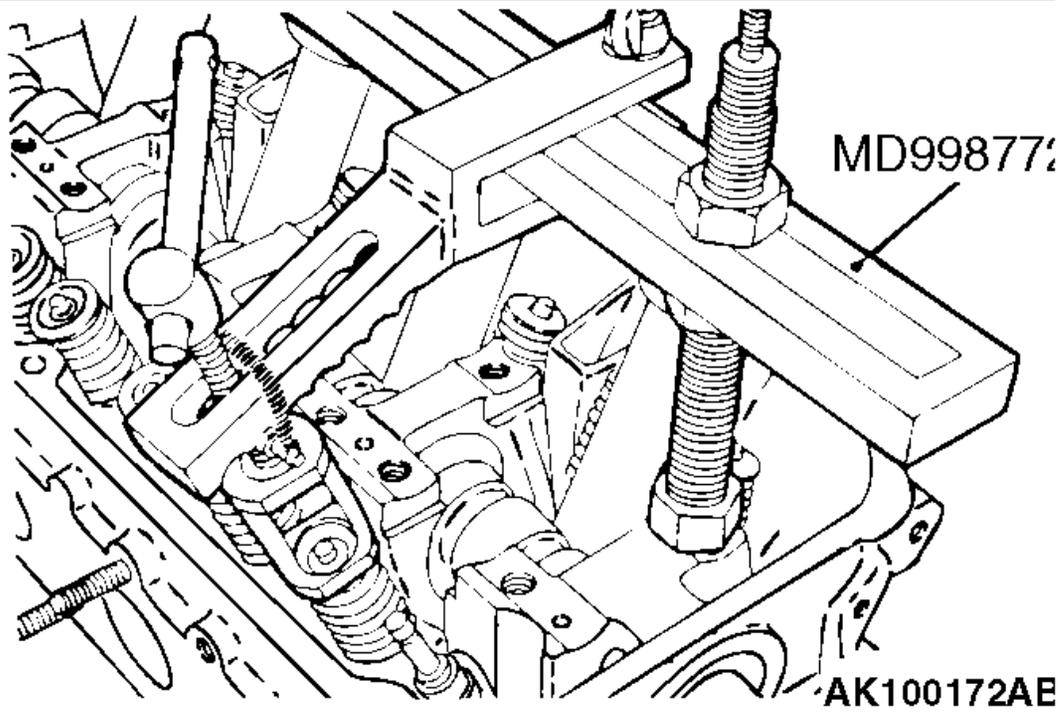

AK100172AE

Do not reuse removed valve stem seal.

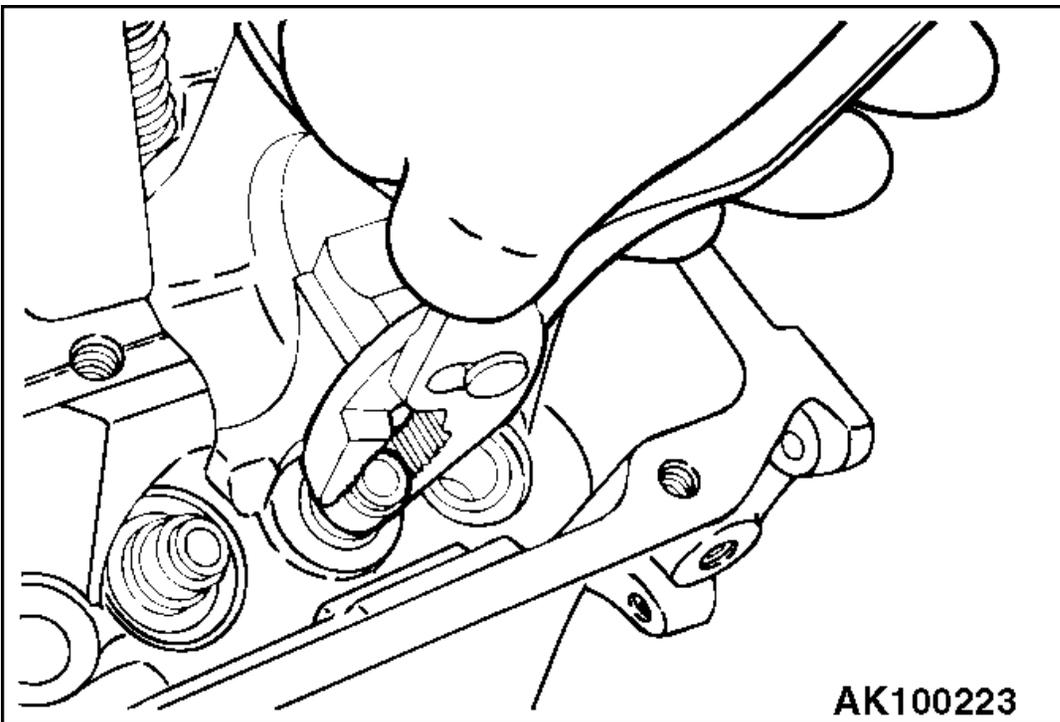

AK100223